
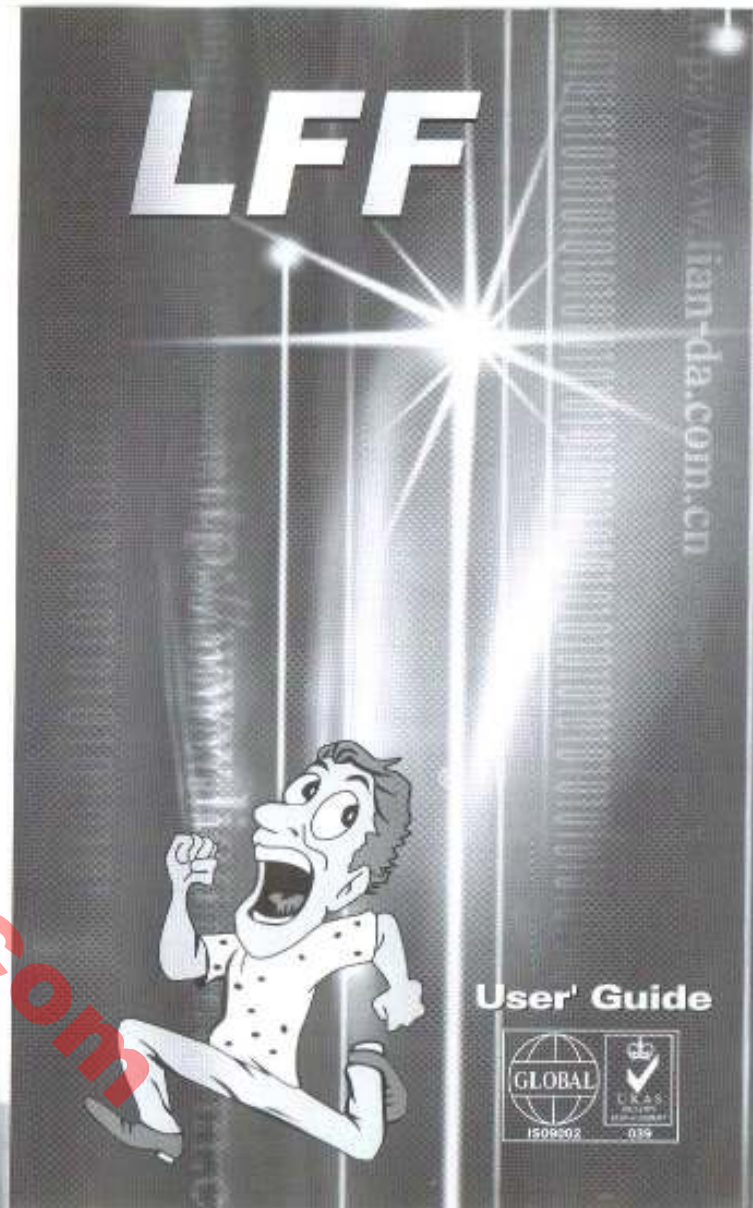


- ★ When you start the engine by remote, the bike should be in neutral.
- ★ When you start the engine by remote, you can't press the start button simultaneously.
- ★ You can't start the bike by remote when the brake light is damaged.
- ★ The transmitter can't be watered, high dropped and should be away from high temperature, and avoid power loss.
- ★ Don't connect the transmitter & key together and insert them into the ignition starter, because it would damage the components in the transmitter if the way is uneven when you drive the bike on the way.
- ★ When the remote control distance is nearer and nearer even the LED on the transmitter is off, please open the transmitter case and change the battery A23 /A27.
- ★ When you stop and park down the bike, should remember to press the button to make in arm mode.
- ★ Before you start the bike, should remember press the button to disarm.

Using Conditions:

- ★ Power Voltage: 12V±3V
- ★ It would affect the alarm functions that the power of the motorcycle battery is not enough, the fuse broken, the voltage adjustor disable, the spark plug cap no metal shield.

The Diagram of the Alarm:

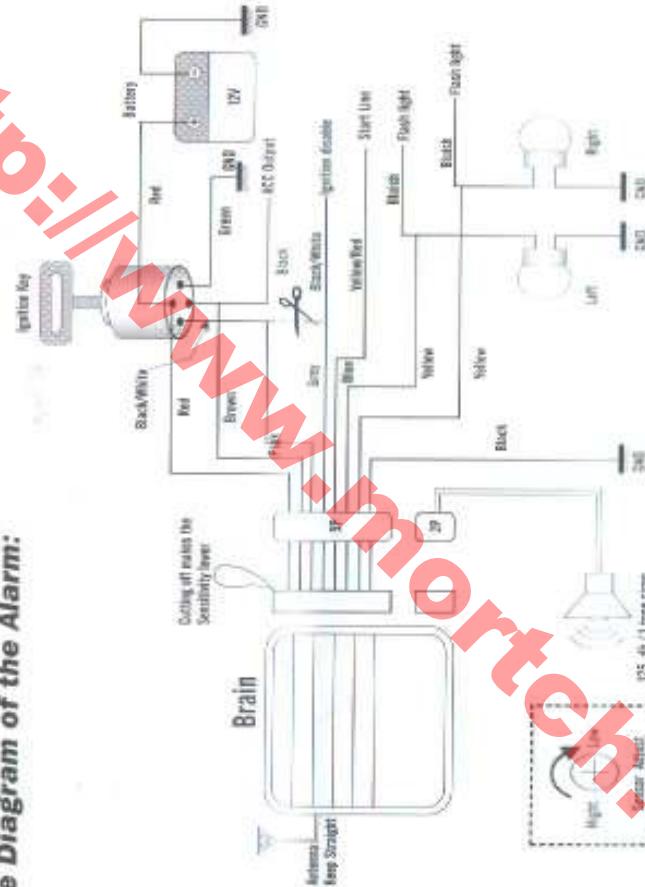



The Function Instruction of Button on Transmitter

	Arm
	Disarm
	Warm & Start Engine

1. Operation Instruction

Arm:

When bike parked and the engine stopped, press the button  on the transmitter once, the siren beeps once and the flash lights gleam once, after 3 seconds in arm Grade1. Or press the button  on the transmitter twice continuously, the siren beeps once and the flash lights gleam twice, after 3 seconds in arm Grade2.

A.Warning Function:

Arm Grade1:

Pre-Warning: It is triggered by hit/hammered, the siren beeps 5 times and the flash lights gleam 5 times at the same time.

Power-Save Horrifying: If it is triggered again within 15 seconds pre-warning, the siren would beep for 15 seconds urgently.


Arm Grade2:

It is triggered by hit/hammered, the siren beeps for 5 seconds urgently and the flash lights gleam for 5 seconds at the same time.



B.Anti-Thief Function:

In arm, if somebody want to start the engine by a key, the siren would beep urgently and the flash lights would gleam at the same time, the engine can not be started.


Disarm:

Before starting the engine, you should press the button  on the transmitter once to disarm. Otherwise, if the engine is started, the siren would beep urgently and the engine start is disable.



Anti-Hijacking:

If the bike is robbed and is driven on the way, you can press the button  on the transmitter once to stop the engine within the distance range of 100 meters, the siren would beep urgently and the flash lights would gleam at the same time in that time. The engine can not be restarted again. You can press the button  on the transmitter again to stop the warning and to make the system come back the normal operation again.

Remote Start Engine:

When the gear box in neutral, press the button  on the transmitter twice within 3 seconds, the engine would be started automatically, but the remote start engine function would be affected by the battery power insufficiency, low idle speed, or low temperature. Don't use the remote start engine function as possible as you can to save the battery power of your motorcycle.

Remote Cut off Engine:

When the engine is running, press the button  on the transmitter once to cut off the engine. For safety, don't press the button  on the transmitter while the bike is moving on the way.

Rearm:

In arm, it would rearm again 3 seconds later after finished bike finding, help calling and remote starting engine incorrectly.

In Arm Warning:


5 seconds later after parked and the engine stopped, the siren would beep 3 times to warn you to make the system in arm.

DYNAMIC QUICK KEY DEVICE INSTRUCTIONS FOR KEY FITMENT

NOTE: The key blank must be cut to match the original **BEFORE** it is fitted into the remote control transmitter.


Position remote control transmitter with buttons facing up.

- 1) Rotate the pivoting key base and hold in place as shown, with the key slot facing to the left, away from the transmitter.
- 2) Align the key so that the groove on the base of the key is facing away from you, toward the top of the transmitter.
- 3) Slide the key base into the slot until the groove on the key lines up with the hole in the pivoting base. Insert the provided screw and tighten.

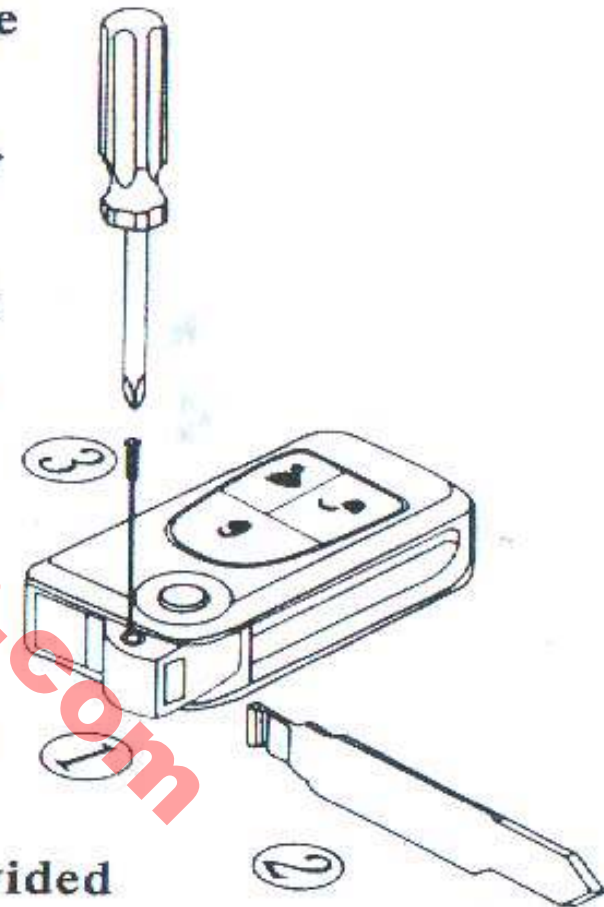

Flip Key Auto Alarm Remote Transmitter Instruction

It is a special device to release or hide the car key from or in the key room which switch should be pressed down while the car key is being released or hided, otherwise it would be damaged by the wrong operation.

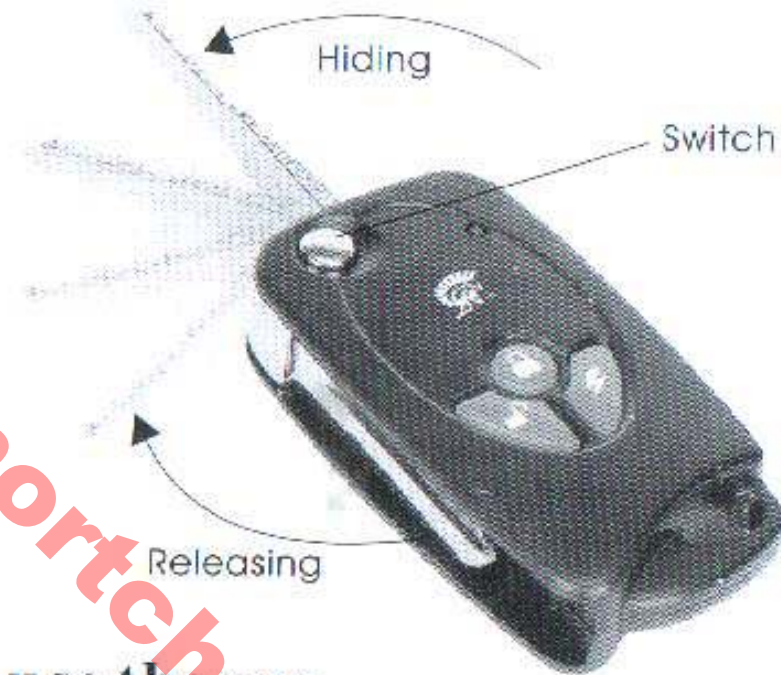

- A. **Releasing:** When you are going to use the car key which is hided in the key room at that moment, please press the switch to make the key flip out from the key room.
- B. **Hiding:** Press the switch down and make the key back into the key room, finally release the switch, the car key is hided in its room.