



New Scooter Operation Manual

TO : USER

Dear customers, thank you for using our scooters, in order to let you know our scooters in details, please pay attention to below information.

- 1) First please read the use manual carefully, then check scooter's light system, signal system, safe system is ok?
- 2) Unfold Center Stand, open fuel tank cover, and insert 90# gasoline.
- 3) Step on kick start about 10 times before turn on Ignition lock, which make gasoline go into the carburetor enough, also you can unscrew the carburetor bolt to check if the gasoline are in carburetor already.
- 4) Turn on ignition key, step on kick start to start scooters, and warm-up about 5-10 minutes, so that scooters are not easy to flame out, and then adjust your rational idle speed time.
- 5) Put the battery into the scooter, please don't use electrical start button to start scooter more than 3 times; and every time, no more than 5 seconds; and you have to make a break every 3 times, so that we can make a longer life of the battery. If your scooters are still not started normally, please make sure the electrical system and fuel system are ok.
- 6) Travel about 1000kms, for 50cc scooters, maximal speed no more than 40km/h; for 125 - 150cc scooters, maximal speed no more than 60km/h.



New Scooter Operation Manual

- 7) Travel about 500kms, please change the engine oil and gear oil.
- 8) Travel more than 1000kms, must change engine oil, when travel about 2000kms, please change gear oil.

At last, thank you again for your confidence and support of our scooters, we believe that you would like to do as follow as what we said above, we would like to service you also. Have a safe trip/journey!