

Mortch International Ltd

# **FALCON**

## **User's Manual**

## Preface

Thank you very much for purchasing our scooters. And welcome to join the driver's line of MORTCH motorcycle.

With its extraordinary advantages of excellent quality, smart appearance and shape of legerity, our product will surely bring the utmost pleasure and convenience to your life.

This manual gives you information about the general structure, function, operation and maintenance methods of **FALCON**. In order to enable your beloved motorcycle to render a best performance and a longer life, please read this manual carefully, pay particular attention to the running-in part in it and follow all the operating instruction. It is of great importance to make your riding safer and more comfortable. Experienced staffs in our sale agency and the maintenance shop will also offer excellent service for you.

- Please take an initial examination of your motorcycle after the first 300km running in our designated maintenance shop, and take regular examination in every 1000km thereafter.
- All the direction, illustration and specification included in t his manual are based on the latest product information. Please be noted that they may be different from the actual status of the motorcycle if there is new revision on its specification, and no further advice will be given.
- This motorcycle was designed and manufactured which complied with e-mark, the safety standard of Europe Union. Please do NOT change any parts without professional advice and use non-original parts in case of avoiding danger to driver and the broken of traffic laws.

## CONTENTS

Guidance .....	1
Names of parts .....	3
Controlling parts .....	4
Fuel tank .....	6
Fuel and engine oil .....	6
Starting pedal .....	6
Pre-riding inspection .....	7
Engine starting .....	8
Running-in .....	9
Regular maintenance .....	10
Tools .....	16
Technical Parameters .....	17
Electrical Circuit Chart .....	19

## ☐ Guidance

Please keep safety in your mind and observe the regulations of transportation while enjoying your riding. Pay attention to the following rules:

### 1. **Pre-riding inspection**

Please read the details in the relevant chapter for your safety.

### 2. **Helmet**

Do remember to wear helmet while riding.

### 3. **Being familiar with motorcycle operation**

It is of great importance to ensure your safety getting familiar with motorcycle operation.

### 4. **Speed limitation**

Drive at proper speed in accordance with the road condition, the weather and your driving skill.

#### **WARNING**

It is dangerous to drive on the wet road.  
Do not make an abrupt turning while accelerating and keep proper distance from other vehicles.





## 5. Positions of the numbers


The frame number and the engine number are for the purpose of registering the motorcycle. When your motorcycle needs inspection, repair or other special service, the number will enable you to get good service from our sale agency. Please note down your number here:

☐ The frame number: \_\_\_\_\_

☐ The engine number: \_\_\_\_\_

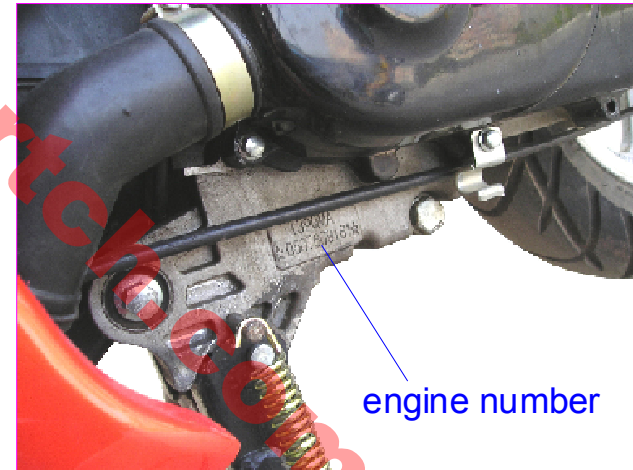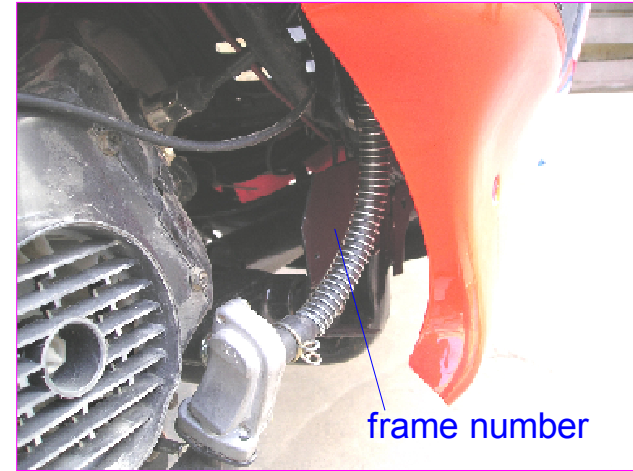

□ Names of parts

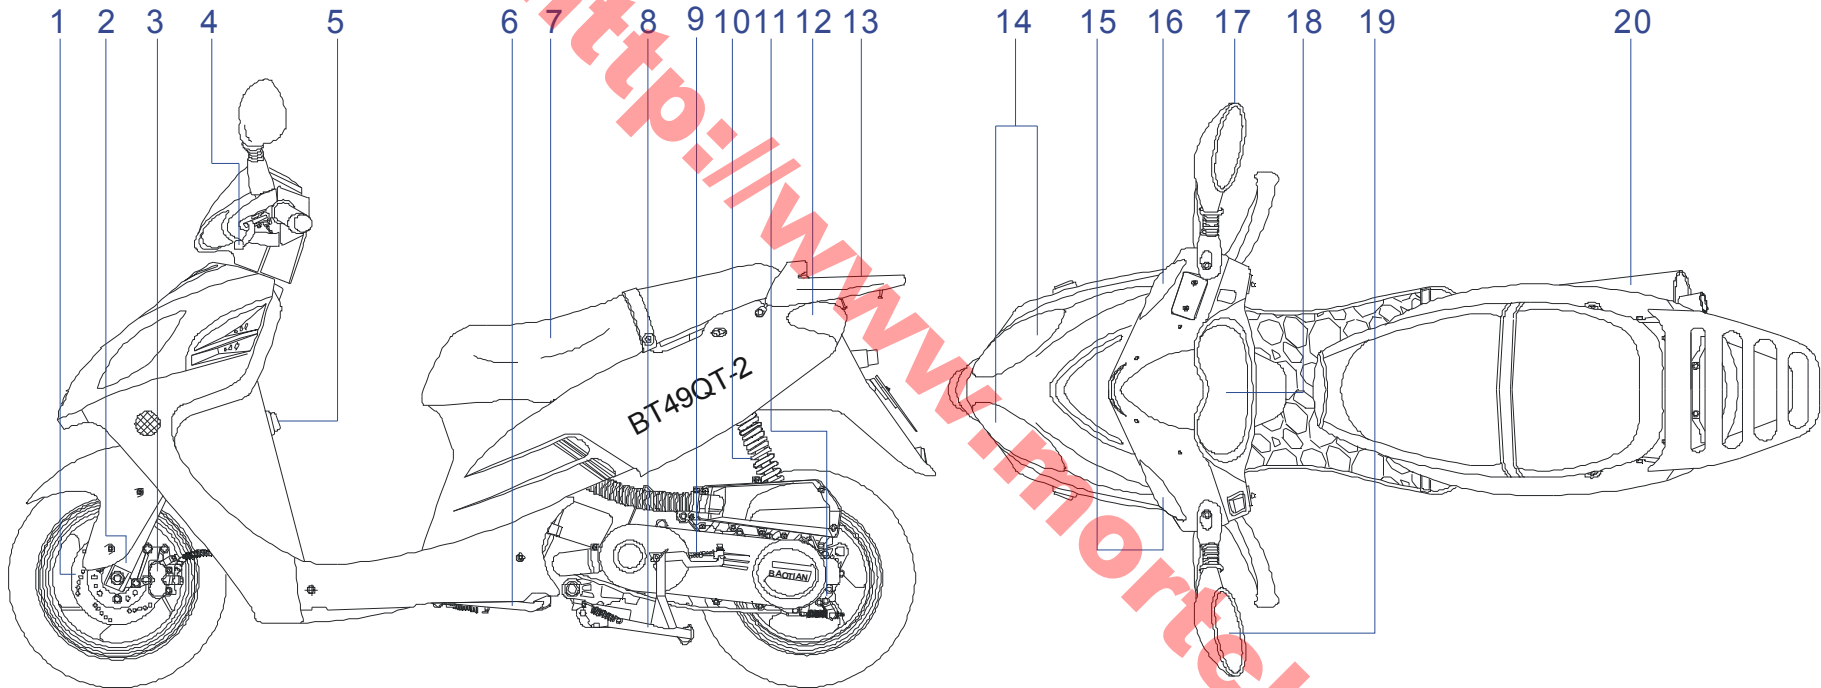

1. brake disc
2. front shock absorber
3. front brake assy.
4. rear brake lever
5. helmet hook

6. side stand
7. seat
8. main stand
9. starting pedal
10. rear shock absorber


11. drum brake
12. taillight & rear turning light
13. hand-hold
14. head light & position light
15. left front turning light

16. right front turning light
17. right rear-view mirror
18. meters
19. left rear-view mirror
20. muffler


## □ Controlling parts

### 1. Rear brake lever

Hold it tight and the rear brake works.

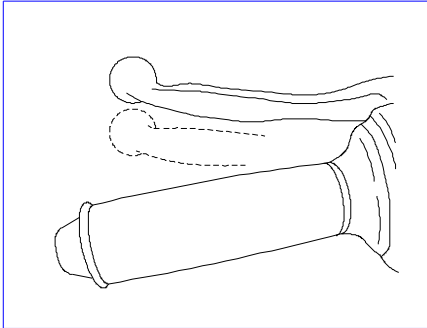

### 2. Switches on the left

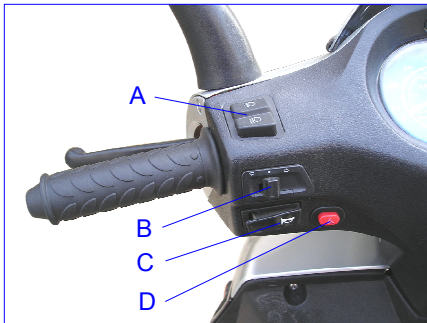


- A. Switch for high/low beam lights
- B. Turning signal switch

- ⇐ Left turning light
- ⇒ Right turning light

C. Horn button

D. Danger signal button


### 3. Meters and indicating lights

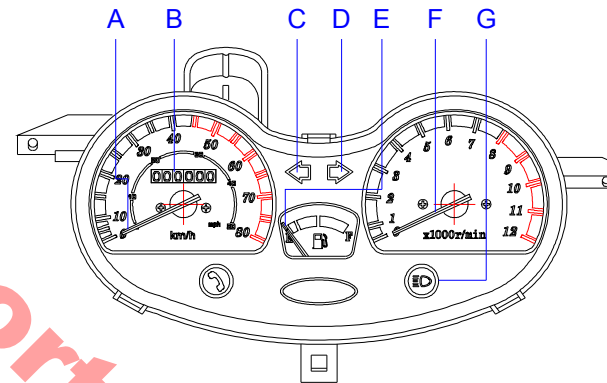


- A. Indicates the speed in km/ h and Mph
- B. Indicates total distance the motorcycle has run
- C. Left turning light indicator
- D. Right turning light indicator
- E. Fuel gauge
- F. Indicates the rev in 1000r/min
- G. High beam indicator

#### 4. Front brake lever

Hold it tightly and the front brake works.

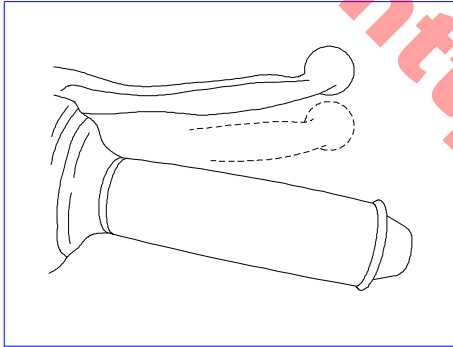


#### 5. Switches on the right

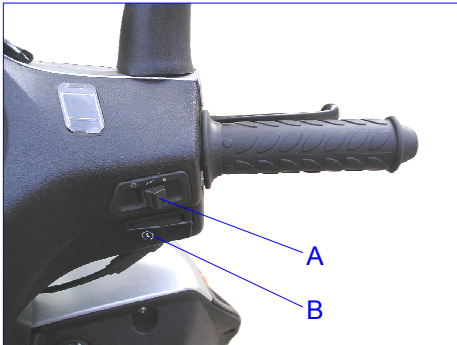

- A. Head light switch
- B. Starting button

When the ignition switch is at ON position, hold the brake and press the button and then the engine starts.

#### 6. Ignition switch

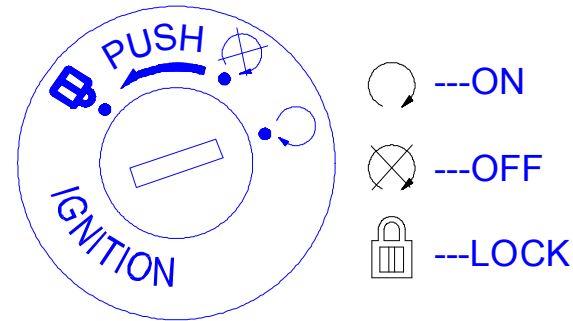

**ON:** Engine can be started and all the lights can be operated. The key cannot be taken out.


**OFF:** The whole circuit is cut. Engine and lights cannot be operated and the key can be taken out.

**LOCK:** Turn the steering handlebar fully to the left, slightly press the key and turn it to the lock position. Then the key can be taken out.

## ☐ Fuel tank

### Usage of the fuel tank lock:

1. Insert the key and open the seat.
2. Turn the cap counter-clockwise and take off it.
3. Align the lock tongue on cap with the notch on the fuel tank, turn the cap clockwise and tightened it.

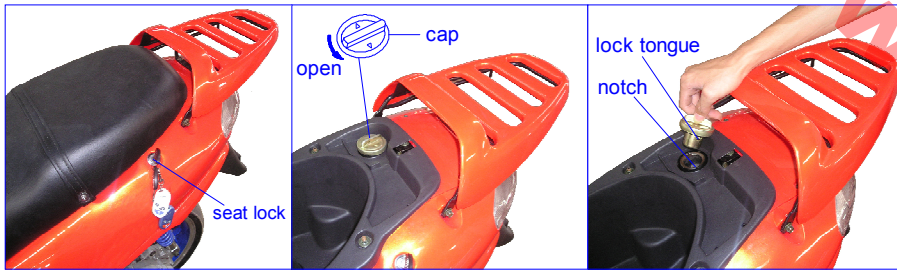

### Warning

- ◆ Turn off the engine when refilling the tank.
- ◆ Turn off the cap slowly.
- ◆ Don't overfill the gasoline over the designated scale.
- ◆ Do not add anything into the gasoline.


## ☐ Fuel and engine oil

### A. Gasoline

High quality fuel is essential to the engine.  
Any sand in the fuel is absolutely prohibited.  
90# or higher quality unleaded gasoline is preferred.


### B. Engine oil

SAE15w/40 SF

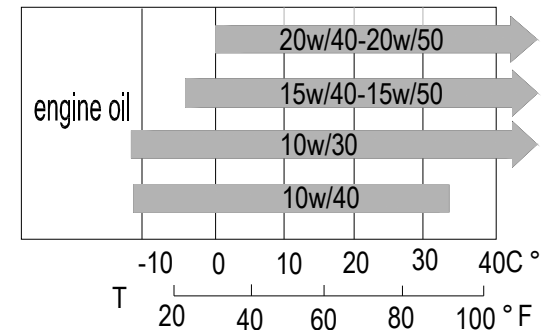

## ☐ Starting pedal

Starting pedal is for kicking start of the engine.

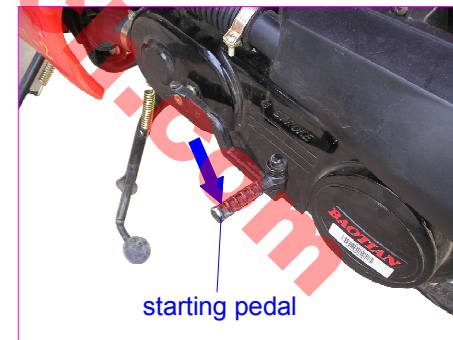

## ☐ Pre-riding inspection

Please check the following parts before you drive.

No.	Items	Inspection content
1	Steering handlebar	1.Flexibility 2.No gap or loosing appearance
2	Brake system	1.Travel of front brake and rear brake 2.No break on the cable 3.Flexible function
3	Tires	1.Proper pressure 2.No crack or cutting
4	Fuel	Sufficient fuel
5	Engine oil	Sufficient engine oil
6	Lights	Workable
7	Horn	Workable
8	Gear oil	With normal stock
9	Throttle	1. Proper gap 2.Flexible function 3.Proper control lever returning
10	All the bolts and nuts	No loosing appearance.


## □ Engine starting

1. Please check the volume of engine oil and gasoline before starting. The main stand and the side stand should not be stood up while starting the engine.
2. Turn the ignition switch to the "ON" position.



## 3. Engine Starting

Press the starting button and then the engine will be started.

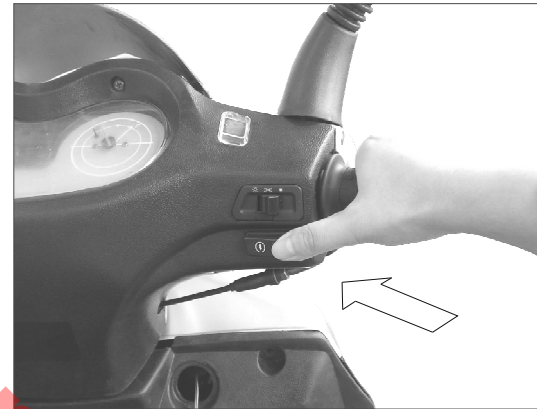

### Warning

- ◆ Grip the rear brake lever in case that the motorcycle rushes forwards abruptly.

### Warning

- ◆ 5 seconds is the maximum limit for each starting and 10 seconds is the minimum interval.
- ◆ Stop pressing the starting button immediately after the engine starts.
- ◆ Do not press the starting button while the engine is running, or the start motor will be damaged.
- ◆ When using electric starting, please press the rear brake lever in advance to get through the circuit and start the motor.
- ◆ When using electric starting, don't operate the starting motor continually, or it may cause damage to the starting motor and the battery.
- ◆ Warm up the engine after cold starting (about 3 minutes).

### Warning

- ◆ After the engine starts, the starting pedal should be turned to its original position. Otherwise, it will affect the driver's safety.
- ◆ Please don't start the engine in unventilated places, because the wasted gas with **CO** is harmful to human beings.

### ☐ Running in

To keep your motorcycle running in a good condition, please follow the below rules during the running-in period.

Distance (km)	Speed limitation (km/h)
0-300	25
300-1000	35
1000-----	≤45

## 4. Kick Starting

Grip the brake lever, tread the starting pedal heavily and then the engine will be started.



## ☐ Regular maintenance

Item	Interval	Km	300	1000	3000	6000	12000
	Month	New motor	1	3	6	12	
Battery		I	I	I	I	I	
Engine oil strainer				C	C		
Gasoline strainer							R
Carburetor		I		I	I		C
Air cleaner core		Clean it every 2000km					
Spark plug		Clean every 3000km, replace when necessary					
Fuel throttle			A	A	A	A	
Drive belt					I	I	
Engine oil		R	R	Replace every 3000km			
Brake system		I	I	I	I	I	
Front fork and steering stem bearing		I	I		I	I	
Suspension		I		I	I	I	
Tires		I	I	I	I	I	
Fastening nuts and bolts		I	F		F	F	
Gear oil		R	Replace every 5000km / 5Month				
Rear brake cam					C		

**NOTE:** I=Inspect and clean、adjust、replace or lubricate when necessary, C=Clean, R=Replace, F=Fastened  
Service more frequently when riding in dusty conditions.


## 1. Battery

12V/5.7Ah battery

- ① When the voltage is less than 11.5V, please use kicking start instead of electric starting.
- ② Put the ignition switch on OFF position before battery replacement.
- ③ Electrode identification: "+"—red line, "—"—green line.
- ④ Change a new battery every 4 years.

## 2. Carburetor and idling speed adjustment

- ① Keep the engine warmed up for 2-3 minutes.
- ② Adjust the idling speed screw to set the engine at speed of  $1900 \pm 100$  rpm. The idling speed adjusting screw is following:

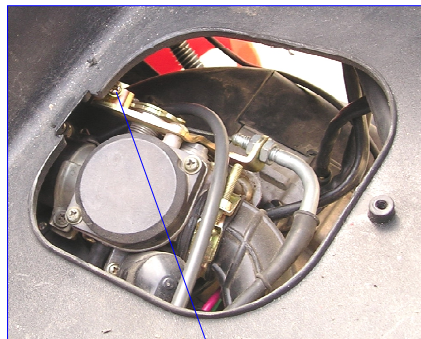


idling speed adjusting screw

## Warning

- ◆ It has been fully adjusted to the highest position when manufactured.

## 3. Air cleaner

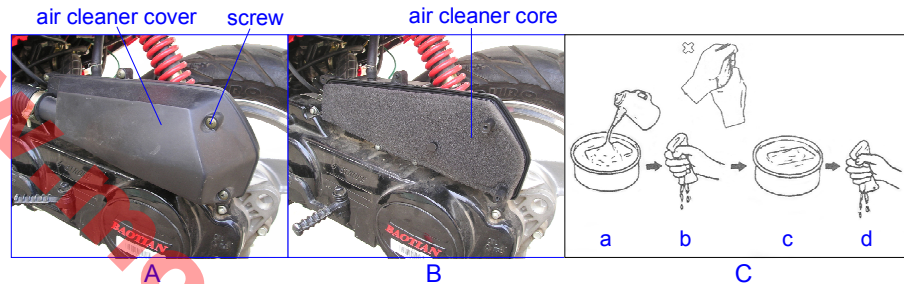

**A:** Air cleaner is on the left rear side of the motorcycle. Remove 6 tightening screws of air cleaner cover.

**B:** Remove air cleaner cover and take out of the sponge core.

**C:** a---- Pour the non-inflammable detergent into a basin and immerse the core into the detergent.

**b**----Press the core in palm to squeeze the detergent out of it. Never twist it in case that it is broken.

**c**----Immerse the core into engine oil.


**d**----Squeeze the excessive oil out but keep it lightly oil immersed.

#### 4. Spark plug

◆ Clean the carbon deposit on the spark plug with a piece of hard wire or steel needle.

◆ Adjust the gap to 0.6-0.7mm with a thickness gauge.

◆ Use A7RC when replacement is needed.

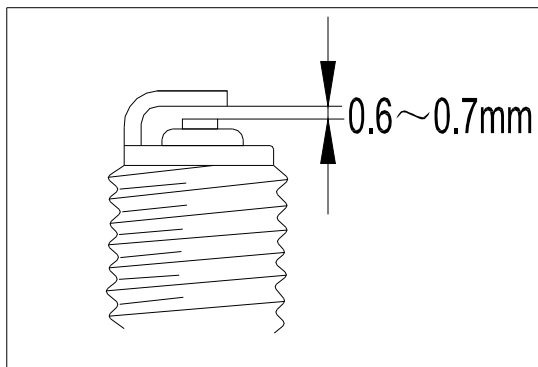


#### 5. Fuel

Refill the recommended unleaded gasoline with an appointed number of 90# or higher when the indicating needle points to the red area in the fuel gauge.

NOTE: Unleaded gasoline will extend spark plug and catalytic converter life.

#### 6. Engine oil

Replace the engine oil with the engine warmed up.

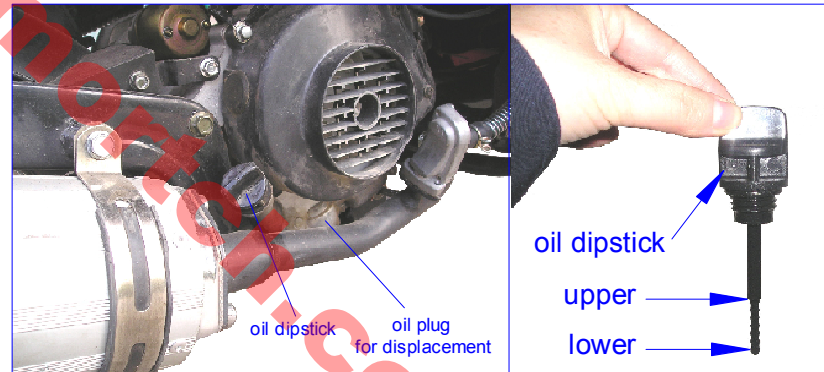


① Remove the oil dipstick.

- ② Remove the oil plug for displacement to drain the used oil.
- ③ Reinstall the oil plug for displacement, paying attention to be tightened .
- ④ Refill 0.8 L recommended fresh engine oil.
- ⑤ Fasten all the nuts and screws.


## 7. Brake system

Normal free stroke of the brake lever is about 10-20mm.

- ① The front brake (disk brake)

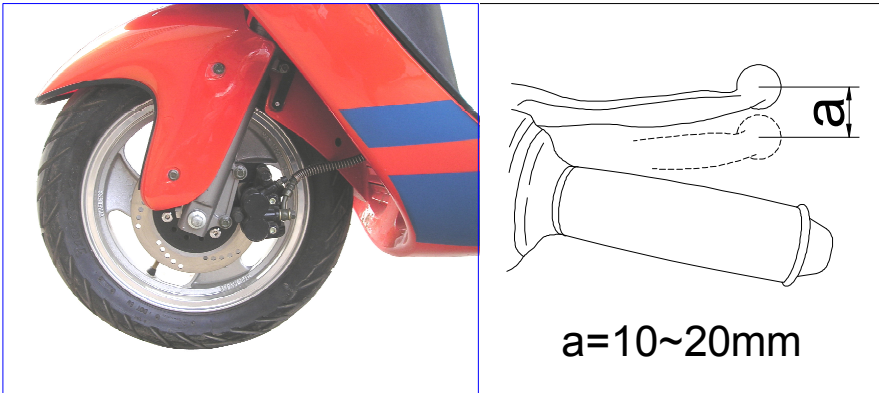

- ② The rear brake (drum brake)  
Turn the adjusting nut to get a proper stroke.

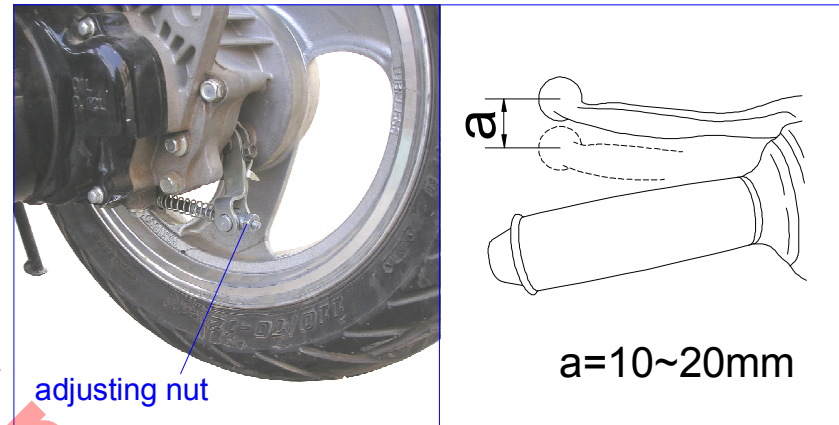


### Warning

- ◆ FREE STROKE means the distance between the positions from free status to the beginning performance of the brake.
- ◆ Pay attention to the sensitivity of the brake.

☆ **Disk brake**

◆ Grip the brake lever and check the wear & tear indicator . If the indicator nearly touched the brake disc, please ask the appointed maintainer to change the brake blocks.

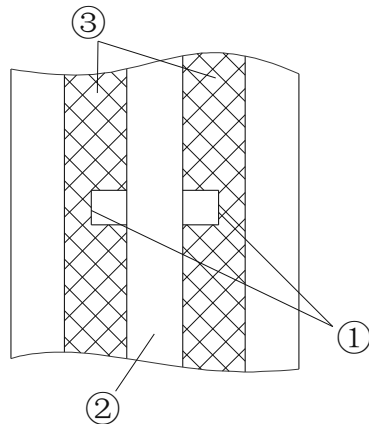

① wear & tear indicator ② brake disc ③ brake blocks

◆ Check the following items of brake system before driving the motorcycle:

① Check if there is any leakage;

- ② Check if there is any leakage or crack on the oil pressed hose;
- ③ The brake lever should be kept with a certain free distance of 10~20mm and kept a certain re-grip power;
- ④ Abrasion of the brake blocks.

◆ **Brake oil level**

① It has been filled with the special brake oil before the motorcycle leaves the factory. User should fill or change the qualified brake oil (such as No.DOT3 or DOT4 brake oil) from the appointed maintenance station. Never change or mix other oil, otherwise it would damage the brake system.

② If the brake oil is insufficient, it might be possible for the air to come into the brake system and result in the failure of the system.

### Warning

- ◆ Brake oil is corrosive material. It would damage and corrupt the painting of the part. It should be cleanout if the oil splash on the part.
- ◆ If the oil sprayed on the skin or eyes, it should be cleaning quickly with a lot of water.


### Warning

- ◆ The standard tire is 110/70-12 47J for front and rear tires. Another type of tire may cause trouble.
- ◆ Tire inflation pressures and the general tire condition are extremely important to the proper performance and safety of the vehicle.

## 8. Tires

Insufficient tire pressure hastens wear of them and affects the riding stability. Please check the tire pressure and tread depth when applying regular maintenance.

- ① Tire pressure: front 225 KPa, rear 250 KPa.
- ② Tread depth: It is suggested to replace a new tire when the tread depth is less than 1 mm.

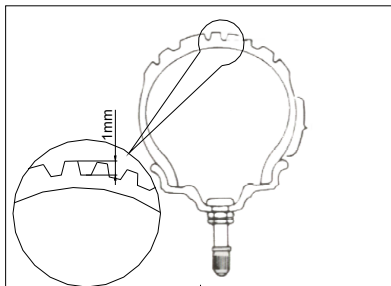

## 9. Starting motor

Check the fastening bolts and the carbon brush, and replace them if necessary.

## 10. Fuse

Fuse (10A) is linked with the outer line of the battery. When a light or circuit fails suddenly, please check the fuse first.

### Warning

- ◆ The fuse can not be replaced by any iron or aluminum wire.

## 11. Gear oil

Please use the recommended gear oil:  
SAE85W/90


Total capacity: 110ml

Replacing capacity: 100ml

How to change gear oil

- Stand up the main stand.
- Take off the oil plug for supplying.
- Take off the oil plug for draining, let off all the dirty gear oil.
- Tighten the oil plug for draining.
- Refill fresh gear oil from the sprue and tighten the oil plug for supplying.

After refilling, please make sure you have locked the oil plug and bolts.

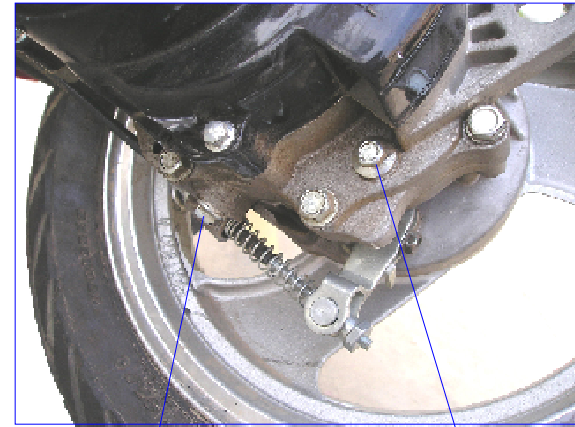

oil plug for displacement

oil plug for supplying

## ☐ Tools

A full set of tools is offered for your daily use.



## □ Technical Parameters

Items		Specifications
Size	Length	1965mm
	Width	700mm
	Height	1120mm
	Wheel base	1420mm
Weight	Unloaded weight	98kg
	Max. load	188kg
Capacity	Max. Speed	45km/h
	Slope	$\geq 21^{\circ}$
Circuit system	Spark plug	A7RC
	Battery	12V/5.7AH
	Fuse	10A
	Headlight	12V 35 / 35W
	Front turning lights	12V 10W
	Rear turning lights	12V 10W
	Brake light	12V 21/5W
	Position lights	12V 5W
Volume of the fuel tank		6L $\pm$ 0.5L
Volume of the engine oil tank		1L



## Mortch International Ltd

Items		Specifications
Engine	Model	139QMA
	Type	4 stroke
	Cylinder	1
	Bore and stroke	39mm × 41.4mm
	Cylinder volume	49cm <sup>3</sup>
	Compression ratio	10.5 ± 0.1:1
	Max. power	2.61 kw/8000r/min
	Max. torque	3.56N • m/5500r/min
	Carburetor	CVK
	Air cleaner	Sponge core
	Ignition type	CDI
	Starting mode	Electric/kicking start
	Cooling mode	Forced air-cooled
	Lubrication	Pressure spray
Brake system		Front: disk brake Rear: drum brake
Suspension	Front shock absorber	Variable-pitch spring & hydraulic damping shock absorber
	Rear shock absorber	Variable-pitch spring & hydraulic damping shock absorber
Tires		110/70-12 47J for front and rear tires

## Electrical Circuit Chart

